# MOUNTING AND OPERATING INSTRUCTIONS



# EB 3773 EN

### Translation of original instructions



Type 3773 Limit Switch

Edition November 2021



### Note on these mounting and operating instructions

These mounting and operating instructions assist you in mounting and operating the device safely. The instructions are binding for handling SAMSON devices. The images shown in these instructions are for illustration purposes only. The actual product may vary.

- ➔ For the safe and proper use of these instructions, read them carefully and keep them for later reference.
- → If you have any questions about these instructions, contact SAMSON's After-sales Service (aftersalesservice@samsongroup.com).



Documents relating to the device, such as the mounting and operating instructions, are available on our website at *www.samsongroup.com* > *Service & Support* > *Downloads* > *Documentation*.

### Definition of signal words

### 

Hazardous situations which, if not avoided, will result in death or serious injury

### 

Hazardous situations which, if not avoided, could result in death or serious injury

### 

Property damage message or malfunction

i Note

Additional information

-☆- Tip

Recommended action

<b>1</b>	Safety instructions and measures
1.1	Notes on possible personal injury
1.3	Notes on possible property damage
2	Markings on the device 2-
2.1	Nameplate 2-
2.2	Article code
3	Design and principle of operation
3.1	Technical data
3.2	Dimensions in mm
4	Shipment and on-site transport4-
4.1	Accepting the delivered goods
4.2	Removing the packaging from the limit switch4-
4.3	Transporting the limit switch
4.4	Storing the limit switch
5	Installation
5.1	Installation conditions
5.2	Preparation for installation
5.3	Mounting the limit switch
5.3.1	Attachment according to VDI/VDE 3845, level 15-2
5.3.2	Attachment according to VDI/VDE 3845, level 2
5.4	Electrical connections
6	Start-up6-
6.1	Adjusting the limit contacts
7	Operation
8	Malfunction8-
8.1	Emergency action8-
9	Servicing9-
9.1	Servicing explosion-protected devices
9.2	Maintenance, calibration and work on equipment9-2
9.3	Preparation for return shipment9-3
9.4	Cleaning the housing cover
9.5	Periodic inspection and testing of the limit switch9-3
10	Decommissioning10-
11	Removal

### Contents

12	Repairs	12-1
12.1	Returning devices to SAMSON	12-1
13	Disposal	13-1
14	Certificates and instructions concerning explosion protection	14-1
14.1	Certificates	14-1
14.2	Instructions concerning explosion protection	14-1
15	Annex	15-1
15.1	After-sales service	15-1

# 1 Safety instructions and measures

### Intended use

The SAMSON Type 3773 Limit Switch is mounted on pneumatic rotary actuators according to VDI/VDE 3845. It issues an electric signal when the valve travel exceeds or falls below an adjusted limit. The signal is suitable for switching control signals, issuing visual and audible alarms or for connection to central control or alarm systems. The device is designed to operate under exactly defined conditions (e.g. temperature). Therefore, operators must ensure that the limit switch is only used in applications where the operating conditions correspond to the technical data. In case operators intend to use the limit switch in other applications or conditions than specified, contact SAMSON.

SAMSON does not assume any liability for damage resulting from the failure to use the device for its intended purpose or for damage caused by external forces or any other external factors.

→ Refer to the technical data for limits and fields of application as well as possible uses.

### Reasonably foreseeable misuse

The Type 3773 Limit Switch is *not* suitable for the following applications:

- Use outside the limits defined during sizing and by the technical data

Furthermore, the following activities do not comply with the intended use:

- Use of non-original spare parts
- Performing maintenance activities not described in these instructions

### Qualifications of operating personnel

The limit switch must be mounted, started up and serviced by fully trained and qualified personnel only; the accepted industry codes and practices must be observed. According to these mounting and operating instructions, trained personnel refers to individuals who are able to judge the work they are assigned to and recognize possible hazards due to their specialized training, their knowledge and experience as well as their knowledge of the applicable standards.

Explosion-protected versions of this device must be operated only by personnel who has undergone special training or instructions or who is authorized to work on explosion-protected devices in hazardous areas.

### Personal protective equipment

No personal protective equipment is required for the direct handling of the limit switch. Work on the control valve may be necessary when mounting or removing the device.

- → Observe the requirements for personal protective equipment specified in the valve documentation.
- → Check with the plant operator for details on further protective equipment.

### **Revisions and other modifications**

Revisions, conversions or other modifications of the product are not authorized by SAMSON. They are performed at the user's own risk and may lead to safety hazards, for example. Furthermore, the product may no longer meet the requirements for its intended use.

### Warning against residual hazards

To avoid personal injury or property damage, plant operators and operating personnel must prevent hazards that could be caused in the control valve by the process medium, the operating pressure, the signal pressure or by moving parts by taking appropriate precautions. Plant operators and operating personnel must observe all hazard statements, warning and caution notes in these mounting and operating instructions, especially for installation, start-up and service work.

### Responsibilities of the operator

Operators are responsible for proper use and compliance with the safety regulations. Operators are obliged to provide these mounting and operating instructions to the operating personnel and to instruct them in proper operation. Furthermore, operators must ensure that operating personnel or third parties are not exposed to any danger.

### Responsibilities of operating personnel

Operating personnel must read and understand these mounting and operating instructions as well as the specified hazard statements, warning and caution notes. Furthermore, the operating personnel must be familiar with the applicable health, safety and accident prevention regulations and comply with them.

### **Referenced documentation**

The following documents apply in addition to these mounting and operating instructions:

- The mounting and operating instructions of the components on which the limit switch is mounted (valve, actuator, valve accessories etc.).

# 1.1 Notes on possible severe personal injury

## 

### Risk of fatal injury due to the ignition of an explosive atmosphere.

Incorrect installation, operation or maintenance of the limit switch in potentially explosive atmospheres may lead to ignition of the atmosphere and ultimately to death.

- ➔ For mounting and electrical installation in hazardous areas, observe the explosion protection approvals as well as the relevant electrotechnical regulations and the accident prevention regulations that apply in the country of use. EN 60079-14 applies in Europe: Electrical installations design, selection and erection
- ➔ Installation, operation or maintenance of the limit switch must only be performed by personnel who has undergone special training or instructions or who is authorized to work on explosion-protected devices in hazardous areas.

### Risk of fatal injury as a result of electrostatic discharge at the housing.

The housing of the limit switch is made of polycarbonate and may become electrostatically charged when handled incorrectly. An electric spark generated by electrostatic discharge may lead to ignition of a potentially explosive atmosphere and cause death.

- → Clean a device installed in dust atmospheres regularly.
- → Only use a damp cloth or wipes to clean the housing surface.

# 1.2 Notes on possible personal injury

## 

### Incorrect electrical connection will render the explosion protection unsafe.

- → Adhere to the terminal assignment and observe correct polarity.
- $\rightarrow$  Do not undo the enameled screws.
- → Do not exceed the maximum permissible values (Ui, li, Pi, Ci, Li) specified in the EU type examination certificates when interconnecting intrinsically safe electrical equipment.

# 1.3 Notes on possible property damage

### 

### Disruption to the process

→ Do not mount or service the limit switch while the process is running and only after isolating the plant by closing the shut-off valves.

# 2 Markings on the device

# 2.1 Nameplate

### Version without explosion protection

SAMSON	3773		
Limit switch, m	echanical		
3		1	
A See technica	l data for a	nbient	temperature
Model 3773-	4		
VarID	5		
Serial no.	6		
SAMSON AG , Germany			Made in Germany

Version with electric microswitches

SAMSON Limit switch,	1 3773 inductive 1 ical data for amb	ient temperature
Model 3773-	4	
VarID	5	
Serial no.	6	
SAMSON AG , Germo	iny	Made in Germany

Version with inductive proximity switches

- 1 Degree of protection
- 2 Limit contact version (mechanical/inductive)
- 3 Permissible contact load
- 4 Model number
- 5 Configuration ID
- 6 Serial number 1)
- 7 Type of protection for explosion-protected devices
- 8 Maximum values of the EU Type Examination Certificate
- 9 Temperature limits in the test certificates for explosion-protected devices
- 1) The first two figures of the serial number in reverse order indicate the year of manufacture of the limit switch (example: serial number 81xxxxx > Year of manufacture = 2018).

### **Explosion-protected version**

SAMSON	3773		C	6
Limit switch,	2			0044
	_			0044
	7			
	8			
* For further valu	Jes see Ad	dendum to E	B 3773 EN	
$\Delta$	9			
Model 3773-	4			
VarID	5	Serial no	. 6	
SAMSON AG D-60314	l Frankfurt		Made in G	ermany

# 2.2 Article code

Limit switch	Туре 3773-	x	x	x	х	x	х	$\sim$	c	x	x	x	0	x	x	x	0	0	0	x	x
Explosion protection			Τ		Τ	Τ				Τ	Τ					Τ					
Without		0	0	0																	
ATEX: II 2G Ex ia IIC T4/1 II 2D Ex ia IIIB T95°	™GB CDb	1	1	0																	
IECEx: Ex ia IIC T4/T6 Gb Ex ia IIIB T95°C Db		1	1	1																	
Limit contact					Τ	Τ				Τ	Τ					Τ					Τ
Inductive SC3,5-N0-WH (-	-40 to +80 °C	2)			0	2															
Inductive SJ3,5-SN (-40 to	+80 °C)				0	5															
Inductive SJ3,5-S1N (-40	to +80 °C)				0	6															
Microswitch XGK19-88-S2 with silver contact (-40 to	20 +80 °C)				2	0															
Microswitch XGK12-81-S2 with gold contact (-40 to +	20 -80 °C)				2	1															
Number of contacts																					
Two contacts							2	2													
Switching angle																					
<100°								(	)												
Terminals																					
Screw terminals										1											
Cage clamp terminals										2											
Electrical threaded connect	tions																				
M20x1.5											1										
Degree of protection																					
IP 65												0									
Housing material																					
Black plastic (polyarylamic	le PA MXD6 -	- G	F50	))										0							
Cover																					
Blue plastic (polycarbonate	e (PC) Makrol	on®	?)												0						

Limit switch	Туре 3773-	x	x	x	x	x	x	x	x	x	x	0	x	x	x	0	0	0	x	x
Permissible ambient temper	rature																			
-25 to +80 °C (+65 °C in -	Г6)														0					
Hardware version																				
Index: 00																			9	9

# 3 Design and principle of operation

The Type 3773 Limit Switch is suitable for mounting on rotary actuators according to VDI/VDE 3845, level 1 and level 2. It is fitted with two inductive proximity switches or two electric microswitches.

An adapter is used to connect the shaft (1) of the limit switch to the actuator shaft. For most applications the contacts are adjusted to issue a signal when the actuator has reached one of its end positions. Two adjustment screws (3) are used to continuously adjust the switching point to any position within the angle of rotation to signalize an intermediate position.

### Version with inductive proximity switches

The limit switch has adjustable metal tags (5) on the shaft. When the tag is inside the magnetic field of the proximity switch (4), the proximity switch is attenuated and the output has a high impedance (switching function "Contact open"). When the tag leaves the magnetic field, the proximity switch is unattenuated and the output has a low impedance (switching function "Contact closed"). The tag can be adjusted to a switching point between 0 and 100° at the adjustment screw (3).

### Version with electric microswitches

The limit switch has two adjustable cam disks (7) on the shaft. The cam disk activates the electric microswitch (6) over the roller on the switch lever. The cam disks can be adjusted to a switching point between 0 and 100° at the adjustment screws (3).

### Terminal versions

Depending on the ordering specifications, the limit switch has screw terminals or cage clamp terminals.





### Legend for Fig. 3-1 and Fig. 3-2:

- 1 Shaft
- 2 Terminals (screw terminals in this example)
- 3 Adjustment screws
- 4 Proximity switch
- 5 Metal tag
- 6 Microswitch
- 7 Cam disk

# 3.1 Technical data

Table 3-1: Technical data of Type 3773 Limit Switch

Type 3773 Limit Switch	
Angle of rotation	0 to 100°
Electromagnetic compatibility	Complying with EN 61000-6-2, EN 61000-6-3 and NAMUR Recommendation NE 21
Degree of protection	IP 65
Explosion protection	Type of protection II 2/3 G/D Ex ia T6
Electrical connection	1x cable gland M20x1.5
Number of contacts	2
Permissible ambient temperature 1)	−40 to +80 °C
Weight	Approx. 0.4 kg

<sup>1)</sup> Observe the temperature limits in the test certificate for explosion-protected versions.

Materials	
Housing	Polyarylamide PA MXD6 – GF50
Housing cover	Polycarbonate (PC) Makrolon®
Follower shaft	Polyoxymethylene (POM)
Housing breather	Polyethersulfone on PET nonwoven fabric
Screws	Stainless steel A4-70
Terminals	Polyamide 6.6

 Table 3-2:
 Technical data of inductive proximity switches

Inductive proximity switches									
Version	-02	-04	-05						
	SC3,5-N0-WH	SJ3,5-SN	SJ3,5-S1N						
Switching function	NAMUR N	VC contact	NAMUR NO contact						
Switching accuracy in mm	0.06 to 0.1	<0.2	<0.3						
Control circuit									
Temperature 1)	-40 to +80 °C	−40 to +80 °C	-40 to +80 °C						
Safety approval		SIL capability							

### Design and principle of operation

Limit contact in type of protection Ex ia IIC for use in hazardous areas (Zone 1)												
Version		-02 -04 -05										
Output voltage	Ui		16 V DC									
Output current	l <sub>i</sub>		52 mA									
Power dissipation	Pi		169 mW									
Outer capacitance	Ci	150 nF	30	nF								
Outer inductance	L	150 µH 100 µH										
Temperature		$-40 \degree C \le Ta \le +45 \degree C$										

<sup>1)</sup> The permissible ambient temperature depends on the permissible ambient temperature of the components, type of protection and temperature class.

A restricted temperature range may arise for SIL applications.

Table 3-3: Technical of	data of	electric	microswitches
-------------------------	---------	----------	---------------

Electric microswitches		
Version	-20	-21
	XGK19-88-S20	XGK12-81-S20
Contact	Silver contact	Gold contact
Switching function	Changeover contact/SPDT (si	ngle-pole/double-throw type)
Switching accuracy	On request	On request
Temperature 1)	−40 to +80 °C	−40 to +80 °C
Permissible contact load	250 V A 125 V D 24 V D	C/10 A C/0.5 A C/10 A
Safety approval	-	-
Limit switch in type of pro	tection Ex nA II for use in hazardous areas (Z	Zone 2 or 22)
Version	-20	-21
Output voltage U <sub>i</sub>	28	3 V
Output current I <sub>i</sub>	115	mA
Power dissipation P <sub>i</sub>	500	mW
Outer capacitance C <sub>i</sub>	0	nF
Outer inductance L <sub>i</sub>	0	μH
Temperature	-40 °C ≤ T	a ≤ +80 °C

<sup>1)</sup> The permissible ambient temperature depends on the permissible ambient temperature of the components, type of protection and temperature class.

A restricted temperature range may arise for SIL applications.

		Certifi	cation			Type of protection/comments
3	10	<u>(c.)</u>	EU type examina-	Number	TÜV 18 ATEX 8323 X	II 2G Ex ia IIC T4/T6 Gb
377	-	$\langle CX \rangle$	tion certificate	Date	2019-04-13	II 2D Ex ia IIIB T95°C Db
ype	11	IFCF.		Number	IECEx TUR 19.0010X	Ex ia IIC T4/T6 Gb
μ£Υ	-	IECEX		Date	2019-04-13	Ex ia IIIB T95°C Db

 Table 3-4:
 Summary of explosion protection approvals

# 3.2 Dimensions in mm



# 4 Shipment and on-site transport

The work described in this section is only to be performed by personnel appropriately qualified to carry out such tasks.

# 4.1 Accepting the delivered goods

After receiving the shipment, proceed as follows:

- Check the scope of delivery. Check that the specifications on the nameplate of the limit switch match the specifications in the delivery note. See the 'Markings on the device' section for nameplate details.
- 2. Check the shipment for transportation damage. Report any damage to SAMSON and the forwarding agent (refer to delivery note).

# 4.2 Removing the packaging from the limit switch

Observe the following sequence:

- ➔ Do not remove the packaging until immediately before installation of the limit switch.
- → Dispose and recycle the packaging in accordance with the local regulations.

# 4.3 Transporting the limit switch

### **Transport instructions**

- Protect the limit switch against external influences (e.g. impact).
- Protect the limit switch against moisture and dirt.
- Observe transport temperature depending on the permissible ambient temperature (see the 'Design and principle of operation' section).

# 4.4 Storing the limit switch

## 

# Risk of damage to the limit switch due to improper storage.

- → Observe the storage instructions.
- ➔ Avoid long storage times.
- Contact SAMSON in case of different storage conditions.

### Note

We recommend regularly checking the prevailing storage conditions during long storage periods.

### Storage instructions

 Protect the limit switch against external influences (e.g. impact, shocks, vibration).

- Do not damage the corrosion protection (coating).
- Protect the limit switch against moisture and dirt. In damp spaces, prevent condensation. If necessary, use a drying agent or heating.
- Observe storage temperature depending on the permissible ambient temperature (see the 'Design and principle of operation' section).
- Do not place any objects on the limit switch.

# 5 Installation

The work described in this section is only to be performed by personnel appropriately qualified to carry out such tasks.

# 5.1 Installation conditions

### Work position

The work position for the limit switch is the front view onto the device cover seen from the position of operating personnel.

Plant operators must ensure that, after installation of the limit switch, the operating personnel can perform all necessary work safely and easily access the device from the work position.

### Mounting orientation

The limit switch may be installed in any position.

# 5.2 Preparation for installation

Before mounting, make sure the following conditions are met:

- The limit switch is not damaged.

Proceed as follows:

→ Lay out the necessary material and tools to have them ready during mounting.

Designation			Order no.
Mounting kit fo	r mo	unting on rotary actuator, 20 mm, fixing level AA1	100015897
Consisting of:	1x	Mounting bracket VDI/VDE 3845, 20 mm shaft height	0300-1214
	4x	Cap screw ISO 4762, M5x12	8333-1249
	4x	Disk spring DIN 2093, B10, 1.4310	8392-0691
Mounting kit fo	r mo	unting on rotary actuator, 30 mm, fixing level AA2	100015792
Consisting of:	1x	Mounting bracket VDI/VDE 3845, 30 mm shaft height	0300-1330
	4x	Cap screw ISO 4762, M5x12	8333-1249
	4x	Disk spring DIN 2093, B10, 1.4310	8392-0691
Mounting kit fo	r mo	unting on rotary actuator, 30 mm, fixing level AA4	100015889
Consisting of:	1x	Mounting bracket VDI/VDE 3845, 50 mm shaft height	0300-1330
	4x	Cap screw ISO 4762, M5x12	8333-1249
	4x	Disk spring DIN 2093, B10, 1.4310	8392-0691

Table 5-1: Accessories for attachment according to VDI/VDE 3845, level 1

# 5.3 Mounting the limit switch

The Type 3773 Limit Switch is suitable for mounting on rotary actuators according to VDI/VDE 3845, level 1 and level 2.

# 5.3.1 Attachment according to VDI/VDE 3845, level 1

- → See Table 5-1 for required accessories
- → See Fig. 5-1
- Use the disk springs and cap screws to fasten the mounting bracket onto the inner holes on the actuator.
- 2. Fasten the adapter (included in the delivery) in the groove of the actuator shaft.
- 3. Open the housing cover.
- Fasten the limit switch onto the actuator yoke using the two fastening screws.
- Refasten the housing cover. Max. permissible tightening torque of the cover screws: 0.8 Nm

# 5.3.2 Attachment according to VDI/VDE 3845, level 2

- 1. See Fig. 5-2
- 2. Fasten the adapter (included in the delivery) in the groove of the actuator shaft.
- 3. Open the housing cover.
- 4. Fasten the limit switch onto the actuator yoke using the four fastening screws.
- Refasten the housing cover. Max. permissible tightening torque of the cover screws: 0.8 Nm



Fig. 5-1: Attachment according to VDI/ VDE 3845, level 1



Fig. 5-2: Attachment according to VDI/ VDE 3845, level 2

# 5.4 Electrical connections

## 

# Risk of fatal injury due to the ignition of an explosive atmosphere.

- → For mounting and electrical installation in hazardous areas, observe the explosion protection approvals as well as the relevant electrotechnical regulations and the accident prevention regulations that apply in the country of use. EN 60079-14 applies in Europe: Electrical installations design, selection and erection
- → Installation, operation or maintenance of the limit switch must only be performed by personnel who has undergone special training or instructions or who is authorized to work on explosionprotected devices in hazardous areas.

## 

### Risk of fatal injury as a result of electrostatic discharge at the housing.

 Ensure that the device, cables and other plant components cannot rub against each other.

## 

### Incorrect electrical connection will render the explosion protection unsafe.

- → Adhere to the terminal assignment and observe correct polarity.
- → Do not undo the enameled screws.
- → Do not exceed the maximum permissible values (Ui, li, Pi, Ci, Li) specified in the EU type examination certificates when interconnecting intrinsically safe electrical equipment.

### Selecting cables and wires

- → Observe the relevant clauses of EN 60079-14 for installation of intrinsically safe circuits.
- → Seal cable entries left unused with plugs.

### Cable entry

The signal lines are connected is made using the M20x1.5 cable gland. Depending on the limit switch version, screw terminals or cage clamp terminals are available to connect a wire cross-section of 2.5 mm<sup>2</sup> (see Fig. 5-4).

- → Connect the wiring as shown in Fig. 5-3.
- → Observe the correct polarity.





# 6 Start-up

The work described in this section is only to be performed by personnel appropriately qualified to carry out such tasks.

## 

# Risk of fatal injury due to the ignition of an explosive atmosphere.

- → For mounting and electrical installation in hazardous areas, observe the explosion protection approvals as well as the relevant electrotechnical regulations and the accident prevention regulations that apply in the country of use. EN 60079-14 applies in Europe: Electrical installations design, selection and erection
- ➔ Installation, operation or maintenance of the limit switch must only be performed by personnel who has undergone special training or instructions or who is authorized to work on explosionprotected devices in hazardous areas.

# 

### Risk of fatal injury as a result of electrostatic discharge at the housing.

Ensure that the device, cables and other plant components cannot rub against each other.

# 6.1 Adjusting the limit contacts

The Type 3773 Limit Switch is fitted with two inductive proximity switches or two electric microswitches (depending on the version).

For most applications the contacts are adjusted to issue a signal when the actuator has reached one of its end positions. Two adjustment screws (3) are used to continuously adjust the switching point to any position within the angle of rotation (0 to 100°) to signalize an intermediate position.

→ Adjust the switching point as shown in Fig. 6-1.



### Start-up

# Switching point shift due to temperature changes

The limit contacts and their operating elements react to temperature changes.

To ensure reliable switching, the switching hysteresis between the actuator's switching position and the limit contact's switching point must be larger than the switching point shift caused by the temperature change.

- → The switching point shift must be compensated for by x turns of the adjustment screw on adjusting the limit contact:
  - Switching point shift  $\Delta T = 50 \text{ K}$
  - Angle of rotation:  $\leq 2^{\circ}$
  - Turns of the adjustment screw:  $\mathbf{x} = \frac{1}{16}$

# 7 Operation

The work described in this section is only to be performed by personnel appropriately qualified to carry out such tasks.

## 

# Risk of fatal injury due to the ignition of an explosive atmosphere.

→ Installation, operation or maintenance of the limit switch must only be performed by personnel who has undergone special training or instructions or who is authorized to work on explosionprotected devices in hazardous areas.

The limit switch issues a signal when an adjusted limit is exceeded or not reached as soon as it is connected to the power supply.

# 8 Malfunction

The work described in this section is only to be performed by personnel appropriately qualified to carry out such tasks.

## 

# Risk of fatal injury due to the ignition of an explosive atmosphere.

- → For mounting and electrical installation in hazardous areas, observe the explosion protection approvals as well as the relevant electrotechnical regulations and the accident prevention regulations that apply in the country of use. EN 60079-14 applies in Europe: Electrical installations design, selection and erection
- ➔ Installation, operation or maintenance of the limit switch must only be performed by personnel who has undergone special training or instructions or who is authorized to work on explosionprotected devices in hazardous areas.

# 

Risk of fatal injury as a result of electrostatic discharge at the housing.

 Ensure that the device, cables and other plant components cannot rub against each other. Proceed as follows in the event of a malfunction:

- → Check attachment.
- → Check the configuration of the mounting parts.
- → Check power supply/electrical signal.
- → Check the control valve to ensure it functions properly.

# 8.1 Emergency action

Plant operators are responsible for emergency action to be taken in the plant.

### 🔆 Tip

Emergency action in the event of valve failure is described in the associated valve documentation.

# 9 Servicing

The work described in this section is only to be performed by personnel appropriately qualified to carry out such tasks.

## 

# Risk of fatal injury due to the ignition of an explosive atmosphere.

- → For mounting and electrical installation in hazardous areas, observe the explosion protection approvals as well as the relevant electrotechnical regulations and the accident prevention regulations that apply in the country of use. EN 60079-14 applies in Europe: Electrical installations design, selection and erection
- → Installation, operation or maintenance of the limit switch must only be performed by personnel who has undergone special training or instructions or who is authorized to work on explosion-protected devices in hazardous areas.

# 

Risk of fatal injury as a result of electrostatic discharge at the housing.

 Ensure that the device, cables and other plant components cannot rub against each other.

# 

# Incorrect electrical connection will render the explosion protection unsafe.

- → Adhere to the terminal assignment and observe correct polarity.
- → Do not undo the enameled screws.
- → Do not exceed the maximum permissible values (Ui, li, Pi, Ci, Li) specified in the EU type examination certificates when interconnecting intrinsically safe electrical equipment.

## 

### Disruption to the process

Do not mount or service the limit switch while the process is running and only after isolating the plant by closing the shut-off valves.

### 

# Malfunction due to the use of unapproved accessories.

→ Only use the accessories listed in the 'Installation' section to mount the limit switch.

## i Note

The limit switch was checked by SAMSON before it left the factory.

The product warranty becomes void if service or repair work not described in these instructions is performed without prior agreement by SAMSON's After-sales Service.

### Servicing

 Only use original spare parts by SAMSON, which comply with the original specifications.

# 9.1 Servicing explosionprotected devices

# 

### Risk of fatal injury as a result of electrostatic discharge at the housing.

The device's housing is made of polycarbonate and may become electrostatically charged when handled incorrectly. An electric spark generated by electrostatic discharge may lead to ignition of a potentially explosive atmosphere and cause death.

Clean a device installed in dust atmospheres regularly. Only use a damp cloth or wipes to clean the housing surface.

If a part of the device on which the explosion protection is based needs to be serviced, the device must not be put back into operation until a qualified inspector has assessed it according to explosion protection requirements, has issued an inspection certificate, or given the device a mark of conformity.

Inspection by a qualified inspector is not required if the manufacturer performs a routine test on the device before putting it back into operation and the passing of the routine test is documented by attaching a mark of conformity to the device. Replace explosion-protected components only with original, routine-tested components by the manufacturer.

Devices that have already been operated outside hazardous areas and are intended for future use inside hazardous areas must comply with the safety requirements placed on serviced devices. Before being operated inside hazardous areas, test the devices according to the specifications for servicing explosion-protected devices.

# 9.2 Maintenance, calibration and work on equipment

- ➔ Interconnection with intrinsically safe circuits to check or calibrate the equipment inside or outside hazardous areas must be performed only with intrinsically safe current/voltage calibrators and measuring instruments to rule out any damage to components relevant to explosion protection.
- Observe the maximum permissible values specified in the certificates for intrinsically safe circuits.

# 9.3 Preparation for return shipment

Defective limit switches can be returned to SAMSON for repair.

Proceed as follows to return devices to SAMSON:

- 1. Remove the limit switch (see the 'Removal' section).
- 2. Send the limit switch to your nearest SAMSON subsidiary. SAMSON subsidiaries are listed on our website at

www.samsongroup.com > Contact.

# 9.4 Cleaning the housing cover

### 

# Incorrect cleaning will damage the housing cover.

The housing cover is made of Makrolon<sup>®</sup> and will be damaged when cleaned with abrasive cleaning agents or agents containing solvents.

- ➔ Do not rub the housing cover dry.
- ➔ Do not use any cleaning agents containing chlorine or alcohol or abrasive cleaning agents.
- ➔ Use a non-abrasive, soft cloth for cleaning.

# 9.5 Periodic inspection and testing of the limit switch

We recommend inspection and testing according to Table 9-1 at the minimum.

Table 9-1: Recommended inspection and testing

Inspection and testing	Action to be taken in the event of a negative re- sult
Check the markings, labels and nameplates on the limit switch for their readability and complete-	Contact SAMSON when nameplates or labels are damaged, missing or incorrect to renew them.
ness.	Clean any inscriptions that are covered with dirt and are illegible.
Check the limit switch to ensure it is mounted firm- ly.	Tighten the any loose mounting screws.
Check the power supply wires.	Tighten any loose cable glands.
	Make sure that the stranded wires are pushed into the terminals and tighten any loose screws on the the terminals.
	Renew damaged lines.

# 10 Decommissioning

The work described in this section is only to be performed by personnel appropriately qualified to carry out such tasks.

# 

# Risk of fatal injury due to the ignition of an explosive atmosphere.

- → For mounting and electrical installation in hazardous areas, observe the explosion protection approvals as well as the relevant electrotechnical regulations and the accident prevention regulations that apply in the country of use. EN 60079-14 applies in Europe: Electrical installations design, selection and erection
- → Installation, operation or maintenance of the limit switch must only be performed by personnel who has undergone special training or instructions or who is authorized to work on explosion-protected devices in hazardous areas.

# 

### Risk of fatal injury as a result of electrostatic discharge at the housing.

 Ensure that the device, cables and other plant components cannot rub against each other. To decommission the limit switch, proceed as follows:

- 1. Disconnect the electrical power supply.
- 2. Open the limit switch cover and disconnect the wires for the power supply.

# 11 Removal

The work described in this section is only to be performed by personnel appropriately qualified to carry out such tasks.

## 

# Risk of fatal injury due to the ignition of an explosive atmosphere.

- → For mounting and electrical installation in hazardous areas, observe the explosion protection approvals as well as the relevant electrotechnical regulations and the accident prevention regulations that apply in the country of use. EN 60079-14 applies in Europe: Electrical installations design, selection and erection
- → Installation, operation or maintenance of the limit switch must only be performed by personnel who has undergone special training or instructions or who is authorized to work on explosion-protected devices in hazardous areas.

# 

### Risk of fatal injury as a result of electrostatic discharge at the housing.

- Ensure that the device, cables and other plant components cannot rub against each other.
- 1. Put the limit switch out of operation (see the 'Decommissioning' section).

- 2. Remove the wires for the power supply from the limit switch.
- 3. To remove the limit switch, loosen the two fastening screws on the device.

# **12 Repairs**

A defective limit switch must be repaired or replaced.

# 

# Risk of damage to the limit switch due to incorrect service or repair work.

- Do not perform any repair work on your own.
- → Contact SAMSON's After-sales Service for repair work.

# 12.1 Returning devices to SAMSON

Defective limit switches can be returned to SAMSON for repair.

Proceed as follows to return devices to SAMSON:

- 1. Put the limit switch out of operation (see the 'Decommissioning' section).
- 2. Remove the limit switch (see the 'Removal' section).
- 3. Proceed as described on the Returning goods page of our website

www.samsongroup.com > Service & Support > After-sales Service > Returning goods

### Disposal

# 13 Disposal



We are registered with the German national register for waste electric equipment (stiftung ear) as a producer of electrical and electronic equipment, WEEE reg. no.: DE 62194439

- → Observe local, national and international refuse regulations.
- → Do not dispose of components, lubricants and hazardous substances together with your other household waste.

### ∹∑́- Tip

On request, we can appoint a service provider to dismantle and recycle the product.

# 14 Certificates and instructions concerning explosion protection

# 14.1 Certificates

The following certificates are included on the next pages:

- EU type examination certificate for Type 3773-110
- IECEx certificate for Type 3773-111

The certificates shown were up to date at the time of publishing. The latest certificates can be found on our website:

www.samsongroup.com > Products & Applications > Product selector > Valve accessories > Type 3773

# 14.2 Instructions concerning explosion protection

The instructions stipulated by SAMSON for the explosion protection of the Type 3773 Limit Switch are based on the above listed certificates.

2)	Equipment and	d Protective Systems intended for use in	
3)	EU-Type Exam	piosive Atmosphere - Directive 2014/34/EU	
'			
		TÜV 18 ATEX 8323 X Issue: 00	
4)	Equipment:	Limit Switch 3773-110**	
5)	Manufacturer:	SAMSON AKTIENGESELLSCHAFT	
.,	Address.	60314 Frankfurt am Main, Germany	
7)	This product a and the docum	and any acceptable variation thereto are specified in the schedule to this certificate ments therein referred to.	
8)	The TÜV Rheil GmbH, Notified 26th February 2 and Safety Re- intended for us	inland Zertifizierungsstelle für Explosionsschutz of TÜV Rheinland Industrie Service d Body No. 0035 in accordance with Article 21 of the Council Directive 2014/34/EU of 2014, certifies this product which has been found to comply with the Essential Health aquirements relating to the design and construction of equipment and protective system: se in potentially explosive atmosphere, given in Annex II to the Directive.	1
	The examination	ion and test results are recorded in the confidential report 557/Ex8323.00/18	
9)	Compliance wi the schedule o	ith the Essential Health and Safety Requirements, with the exception of those listed in of this certificate, has been assessed by reference to:	
	EN 60079-0: 2	2018 EN 60079-11: 2012	
10	conditions for s	is placed after the certificate number, it indicates that the equipment is subject to special safe use specified in the schedule to this certificate.	1
11	This EU-Type the equipment the equipment	Examination Certificate relates only to the design and specification for construction of t or protective system. It does not cover the process for actual manufacture or supply of t or protective system, for which further requirements of the directive are applicable.	
12	) The marking o	of the equipment shall include the following:	
	A	Ð	
	≌⁄li2GExi	ia IIC T4/T6 Gb VEV II 2 D Ex ia IIIB T95°C Db	
0	Rheinland Zer	Tiffzierungsstelle für Explosionsschutz Cologne, 2019-04-13	
Dip	IIng Klauspete	de Gratte	
	This EU-Type Exam	The EUType Examination Certificate without signature and stamp shall not be valid. approve Cartificate may be circulated only without eleration. Extractor alterations are subject to approval by the Without State State The 14.90 (2012) 180-50 Extra 4.01 (2012) 180-51 (34)	



Annex

#### **EU Type Examination Certificate** (14)**TÜV 18 ATEX 8323 X** Issue: 00

#### (15) Description of equipment

(13)

#### 15.1 Equipment and type:

Limit Switch 3773-110\*\*

15.2 Description

The Type 3773 Limit Switch issues an electrical signal when an adjusted limit value is exceeded or reached. The signal is suitable for reversing control signals, generating visual and audible alarm, or for connection to central control or alarm systems. It can be used in hazardous atmospheres of up to zone 1 or zone 21.

#### Model code:

3773-110\*\*

Type Code:



Page 1 / 5 of Annex to TÜV 18 ATEX 8323 X

DOPONS 100 2 rks. ocistered aror TUEV and TUV 201



#### 15.3 Technical Data

#### Electrical data:

Gas and Dust Atmosphere:

Inductive Limit Switches:

Connection @ terminals +41 / -42 and +51 / -52						
181 52 8	Type of protection: Ex ia IIC / IIIB					
Model Code	Ui	Туре	4	Pi	Ci	L
3773-11001or	40.11	2	25 mA	64 mW	150 nF	150 µH
3773-11101	10 V	3	52 mA	169 mW	150 nF	150 µH
3773-11002 or	1011	2	25 mA	64 mW	150 nF	150 µH
3773-11102	10 V	3	52 mA	169 mW	150 nF	150 µH
3773-11003 or	16 V	2	25 mA	64 mW	150 nF	150 µH
3773-11103		3	52 mA	169 mW	150 nF	150 µH
3773-11004 or	16 V	2	25 mA	64 mW	50 nF	250 µH
3773-11104		3	52 mA	169 mW	50 nF	250 µH
3773-11005 or	<sup>or</sup> 16 V	2	25 mA	64 mW	30 nF	100 µH
3773-11105		3	52 mA	169 mW	30 nF	100 µH
3773-11006 or	1011	2	25 mA	64 mW	30 nF	100 µH
3773-11106	10 V	3	52 mA	169 mW	30 nF	100 µH
3773-11007 or 3773-11107	20 V		60 mA	130 mW	250 nF	350 µH

Electric Microswitches:

Conne	ction @ termin	als 41 , 42 , 43	and 51, 52,	53	
DW. C. Walnes	Type of prot	ection: Ex ia I	IC / IIIB		
Model Code	Ui	li	Pi	Ci	Li
3773-11020 or 3773-11120					
3773-11021 or 3773-11121					
3773-11024 or 3773-11124					
3773-11025 or 3773-11125	28V	115 mA	500 mW	0 nF	0 µ F
3773-11026 or 3773-11126					
3773-11027 or 3773-11127					

This EU Type Examination Certificate without signature and official stamp shall not be valid. This certificate may be circulated without alteration. Extracts or alterations are subject to approval by: Zertifizierungsstelle of TUV Rheinfand Industris Service GmbH

Page 2 / 5 of Annex to TÜV 18 ATEX 8323 X Issue: 00



#### **Environmental data:**

Gas Atmosphere:

Inductive Switches operation with type of protection Intrinsic Safety Ex ia IIC:

Model code	Temperature class	Туре	Permissible ambient temperature $T_a$
		2	-40 °C ≤ T <sub>e</sub> ≤ +80 °C
3773 -11001 or	14	3	-40 °C ≤ T <sub>a</sub> ≤ +75 °C
3773 -11101	70	2	-40 °C ≤ T <sub>a</sub> ≤ +65 °C
	Т6		-40 °C ≤ T <sub>e</sub> ≤ +40 °C
		2	-40 °C ≤ T <sub>a</sub> ≤ +80 °C
3773 -11002 or	14	3	-40 °C ≤ T <sub>a</sub> ≤ +80 °C
3773 -11102	TO	2	-40 °C ≤ Ta ≤ +66 °C
	T6 2		-40 °C ≤ T <sub>a</sub> ≤ +45 °C
	74	2	-40 °C ≤ T <sub>a</sub> ≤ +80 °C
3773 -11003 or	14	3	-40 °C ≤ T <sub>a</sub> ≤ +80 °C
3773 -11103	TO	2	-40 °C ≤ T <sub>a</sub> ≤ +66 °C
	10	3 2 3 2 3 2 3 2 3 2 3 3 2 3 3 2 3 3 2 3 3 2 3 3 2 3 3 2 3 3 2 3 3 2 3 3 2 3 3 2 3 3 2 3 3 2 3 3 2 3 3 2 3 3 3 2 3	-40 °C ≤ T <sub>a</sub> ≤ +45 °C
		2	-40 °C ≤ T, ≤ +80 °C
3773 -11004 or	14	3	-40 °C ≤ T <sub>a</sub> ≤ +80 °C
3773 -11104	70	2	-40 °C ≤ T <sub>a</sub> ≤ +66 °C
	16	3	-40 °C ≤ T <sub>a</sub> ≤ +45 °C
		2	-40 °C ≤ T <sub>a</sub> ≤ +80 °C
3773 -11005 or	14	3	-40 °C ≤ T <sub>a</sub> ≤ +80 °C
3773 -11105	TO	2	-40 °C ≤ T <sub>a</sub> ≤ +66 °C
	10	3	-40 °C ≤ T <sub>a</sub> ≤ +45 °C
		2	-40 °C ≤ T <sub>a</sub> ≤ +80 °C
3773 -11006 or	14	3	-40 °C ≤ T <sub>a</sub> ≤ +80 °C
3773 -11106	TO	2	-40 °C ≤ T <sub>a</sub> ≤ +66 °C
	16	3	-40 °C ≤ T <sub>a</sub> ≤ +45 °C
3773 -11007 or	T4		-25 °C ≤ T <sub>a</sub> ≤ +70 °C
3773 -11107	T6	23	-25 °C ≤ T <sub>a</sub> ≤ +70 °C

This EU Type Examination Cartificate without signature and official stamp shall not be valid. This certificate may be circulated without alteration. Extracts or alterations are subject to approval by: Zertifizerungsstelle of TVU Rhelmand Industre Service Group

Page 3 / 5 of Annex to TÜV 18 ATEX 8323 X

Issue: 00



Micro Switches operation with type of protection Intrinsic Safety Ex ia IIC (The temperature rise of the micro Switches is negligible.):

Model Code	Permissible ambient temperature T
3773 -11020 or 3773 -11120	-40 °C ≤ T <sub>e</sub> ≤ +80 °C
3773 -11021 or 3773 -11121	-40 °C ≤ T <sub>a</sub> ≤ +80 °C
3773 -11024 or 3773 -11124	-40 °C ≤ T <sub>a</sub> ≤ +80 °C
3773 -11025 or 3773 -11125	-40 °C ≤ T <sub>a</sub> ≤ +80 °C
3773 -11026 or 3773 -11126	-40 °C ≤ T <sub>*</sub> ≤ +80 °C
3773 -11027 or 3773 -11127	-20 °C ≤ T <sub>a</sub> ≤ +80 °C

#### Dust atmosphere:

Inductive switches operation with type of protection Intrinsic Safety Ex ia IIIB:

Madalaada	Maximum	Maximum Permissible ambient temperature		
Model code	surface temperature	Туре 2	Type 3	
3773 -11001 or 3773 -11101	-	-40 °C ≤ T <sub>a</sub> ≤ +60 °C	-40 °C ≤ T <sub>a</sub> ≤ +35 °C	
3773 -11002 or 3773 -11102		-40 °C ≤ T <sub>a</sub> ≤ +60 °C	-40 °C ≤ T <sub>a</sub> ≤ +49 °C	
3773 -11003 or 3773 -11103		-40 °C ≤ T <sub>a</sub> ≤ +60 °C	-40 °C ≤ T <sub>a</sub> ≤ +49 °C	
3773 -11004 or 3773 -11104	T 95 °C	-40 °C ≤ T <sub>a</sub> ≤ +60 °C	-40 °C ≤ T <sub>a</sub> ≤ +49 °C	
3773 -11005 or 3773 -11105		-40 °C ≤ T <sub>a</sub> ≤ +60 °C	-40 °C ≤ T <sub>a</sub> ≤ +49 °C	
3773 -11006 or 3773 -11106		-40 °C ≤ T <sub>a</sub> ≤ +60 °C	-40 °C ≤ T <sub>a</sub> ≤ +49 °C	
3773 -11007 or 3773 -11107		-25 °C ≤ T	s +70 °C	

Micro Switches operation with type of protection Intrinsic Safety Ex ia IIIB (The temperature rise of the micro Switches is negligible.):

The max. surface temperature is equal to the max. ambient temperature.

This EU Type Examination Certificate without signature and official stamp shall not be valid. This certificate may be circulated without alteration. Extracts or alterations are subject to approval by: Zertifizierungsstelle of TWD Kheninad Industrie Servoc GmbH

Page 4 / 5 of Annex to TÜV 18 ATEX 8323 X

Issue: 00



List of used equipment and components:

Gerät/	Hersteller/	Typ/	Ex-Kennzeichnung/	Bescheinigung-Nr./
Device	Manufacturer	Type	Ex-Marking	Certificate no.
Proximity switches	Pepperl+Fuchs GmbH	SC3,5-NO-YE SC3,5-NO-WH SC3,5-NO-BU SJ3,5-N LED	Ex ia IIC T6 Ga/Gb Ex ia IIIC Txxx°C Da	PTB 99 ATEX 2219 X IECEx 11.0092X
Proximity	Pepperl+Fuchs	SJ3,5-SN	Ex ia IIC T6 Ga/Gb	PTB 00 ATEX 2049 X
switches	GmbH	SJ3,5-S1N	Ex ia IIIC Txxx°C Da	IECEx 11.0091X
Proximity	Hans Turck	SI3,5-K10-Y1	Ex ia IIC T6 Ga/Gb	KEMA 02 ATEX 1090 X
switches	GmbH & Co. KG		Ex ia IIIC Txxx°C Da	IECEx KEM 06.0036X

#### (16) Test-Report No.

#### 557/Ex8323.00/18

#### (17) Special Conditions for safe use

- Explosion hazard due to electrostatic charge: In hazardous areas, the device must be erected and maintained in such a way that no static charge can occur on the plastic housing. See user manual.
- 2. For electrical installation, the EN 60079-14 needs to be observed.

#### (18) Basic Safety and Health Requirements

Covered by afore mentioned standard

TÜV Rheinland Zertifizierungsstelle für Explosionsschutz

Cologne, 2019-04-13



This EU Type Examination Certificate without signature and official stamp shall not be valid. This certificate may be circulated without alteration. Extracts or alterations are subject to approval by: Zertifizerungsstelle of TUV Rheiniand Industrie Service GmbH

Page 5 / 5 of Annex to TÜV 18 ATEX 8323 X Issue: 00

stops on or TUN, TUEV and TUV are registered trademarks. Utilisation and application requires prior approval.

	CEx 	of Conformi	ty
	INTERNATIONAL ELEC IEC Certification Scher for rules and details of th	TROTECHNICAL COMMISSI me for Explosive Atmosphere: e IECEx Scheme visit www.iecex.com	ON S
Certificate No.:	IECEx TUR 19.0010X	Issue No: 0	Certificate history: Issue No. 0 (2019-04-13)
Status:	Current	Page 1 of 3	
Date of Issue:	2019-04-13	1 430 1 01 0	
Applicant:	SAMSON AKTIENGESELLSCHAFT Weismüllerstraße 3 60314 Frankfurt am Main Germany		
Equipment: Optional accessory:	Limit switch 3773		
Type of Protection:	Exia		
Narking:	Ex ia IIC T4/T6 Gb / Ex ia IIIB T 95°C Db		
Approved for issue or Certification Body:	h behalf of the IECEx	DiplIng. Klauspeter Graffi	
Position:		Head of Certification Body	
Signature: 'for printed version)		Weunpeter the	
Date:		2019-04-13	
I. This certificate and 2. This certificate is no 8. The Status and aut Certificate issued by:	schedule may only be reproduced in full. of transferable and remains the property of th hentificity of this certificate may be verified by	e issuing body. visiting the Official IECEx Website.	
1007	Am Grauen Stein 51105 Cologne Germany	TÜVRheinland	

	IECEx Certificate
	of Conformity
Certificate No:	IECEX TUR 18.0010X Issue No: 0
Date of Issue:	2019-04-13 Page 2 of 3
Manufacturer:	SAMSON AKTIENGESELLSCHAFT Weismüllerstraße 3 60314 Frankfurt am Main Germany
Additional Manufacturing loc	ation(s):
This certificate is issued as v IEC Standard list below and found to comply with the IEC Rules, IECEx 02 and Operat	verification that a sample(s), representative of production, was assessed and tested and found to comply with the that the manufacturer's quality system, relating to the Ex products covered by this certificate, was assessed and Ex Quality system requirements. This certificate is granted subject to the conditions as set out in IECEx Scheme tional Documents as amended.
STANDARDS:	
The apparatus and any acce with the following standards:	ptable variations to it specified in the schedule of this certificate and the identified documents, was found to comply
IEC 60079-0 : 2017 Edition:7.0	Explosive atmospheres - Part 0: Equipment - General requirements
IEC 60079-11 : 2011 Edition:6.0	Explosive atmospheres - Part 11: Equipment protection by intrinsic safety "r
This Certificate does not in	ndicate compliance with electrical safety and performance requirements other than those expressly included in the
	Standards listed above.
A sample(s) of the equipment	VORTS: It listed has successfully met the examination and test requirements as recorded in
Test Report:	
DE/TUR/ExTR19.0010/00	
Quality Assessment Report:	
DE/TUN/QAR06.0011/08	

	Ex	IECEx Certificate of Conformity
Certificate No:	IECEx TUR 19.0010X	Issue No: 0
Date of Issue:	2019-04-13	Page 3 of 3
	s	Schedule
EQUIPMENT:		
Equipment and systems c	overed by this certificate are as follows:	
imit switch type 3773 - 111		
For details see attachment		
SPECIFIC CONDITIONS	OF USE: YES as shown below:	
Explosion hazard due to ele charge can occur on the pla	ctrostatic charge: In hazardous areas, the stic housing. See user manual.	device must be erected and maintained in such a way that no static
For electrical installation, th	e IEC 60079-14 needs to be observed	
Annex:		
IECEX_TUR_19.0010_Atta	achment.pdf	



Attachment to Certificate IECEx TUR 19.0010X Revison 0



Device: Type:

Limit switch type 3773 3773-111\*\*

#### SAMSON AKTIENGESELLSCHAFT Manufacturer:

Address:

Weismüllerstraße 3, 60314 Frankfurt am Main, Germany

Subject and type Limit switch type 3773

# 3773-xxxx x

	ŀЫ	(pla	2210	on pro	tection
0	0	0			Not Ex
1	1	0			II 2 G Ex ia IIC T6 Gb / II 2 D Ex ia IIIB T 95°C (according to ATEX)
1	1	1			Ex ia IIC T6 Gb / Ex ia IIIB T 95°C Db (according to IECEx)
				Swite	ch Options
			0	1	Inductive Switch Type SC3,5-NO-YE
			0	2	Inductive Switch Type SC3,5-NO-WH
			0	3	Inductive Switch Type SC3,5-NO-BU
			0	4	Inductive Switch Type SJ3,5-N LED
			0	5	Inductive Switch Type SJ3,5-SN
			0	6	Inductive Switch Type SJ3,5-S1N
			0	7	Inductive Switch Type SI3,5-K10-Y1
			2	0	Micro Switch Type XGK19-88-S20 contact silver
			2	1	Micro Switch Type XGK12-81-S20 contact gold
			2	4	Micro Switch Type ABV 1615503R contact silver
			2	5	Micro Switch Type ABV 1615513R contact gold
			2	6	Micro Switch Type EF83161-3 contact silver

6 Micro Switch Type EF83161-3 contact silver

2 7 Micro Switch Type 83132 (DPDT) contact silver

#### **General product information**

The Type 3773 Limit Switch issues an electrical signal when an adjusted limit value is exceeded or reached. The signal is suitable for reversing control signals, generating visual and audible alarm, or for connection to central control or alarm systems. It can be used in hazardous atmospheres of up to zone 1 or zone 21.

TÜV Rheinland Industrie Service GmbH Am Grauen Stein 51105 Cologne Tel. +49 (0) 221 806-0 Fax. + 49 (0) 221 806 114

Page 1/4



Attachment to Certificate IECEX TUR 19.0010X Revison 0



**Technical data** 

#### Electrical data:

Gas and dust atmosphere:

Inductive Limit Switches:

Connection @ terminals +41 / -42 and +51 / -52						
Type of protection: Ex ia IIC / IIIB						
Model Code	Ui	Туре	h	Pi	Ci	Li
3773-11001or	16.1	2	25 mA	64 mW	150 nF	150 µH
3773-11101	16 V	3	52 mA	169 mW	150 nF	150 µH
3773-11002 or	16.1	2	25 mA	64 mW	150 nF	150 µH
3773-11102	16 V	3	52 mA	169 mW	150 nF	150 µH
3773-11003 or 3773-11103	16 V	2	25 mA	64 mW	150 nF	150 µH
		3	52 mA	169 mW	150 nF	150 µH
3773-11004 or	16 V	2	25 mA	64 mW	50 nF	250 µH
3773-11104		3	52 mA	169 mW	50 nF	250 µH
3773-11005 or	16 V	2	25 mA	64 mW	30 nF	100 µH
3773-11105		3	52 mA	169 mW	30 nF	100 µH
3773-11006 or	10.1	2	25 mA	64 mW	30 nF	100 µH
3773-11106	10 V	3	52 mA	169 mW	30 nF	100 µH
3773-11007 or 3773-11107	20 V	-	60 mA	130 mW	250 nF	350 µH

Electric Microswitches:

Connection	@ termina	ls 41 , 42 , 4	43 and 51	, 52 , 53	
T	pe of prote	ection: Ex i	a IIC / IIIB		
Model Code	Ui	li	Pi	Ci	Li
3773-11020 or 3773-11120					
3773-11021 or 3773-11121			500 - 14	0 nF	0 µН
3773-11024 or 3773-11124					
3773-11025 or 3773-11125	280	115 mA	500 mW		
3773-11026 or 3773-11126	7				
3773-11027 or 3773-11127	1				

TÜV Rheinland Industrie Service GmbH Am Grauen Stein 51105 Cologne Tel. +49 (0) 221 806-0 Fax. + 49 (0) 221 806 114

Page 2 / 4



Attachment to Certificate IECEx TUR 19.0010X Revison 0



#### Environmental data:

Gas atmosphere:

Inductive Switches operation with type of protection Intrinsic Safety Ex ia IIC:

Model code	Temperature class	Туре	Permissible ambient temperature Ta
	T4	2	-40 °C ≤ Ta ≤ +80 °C
3773 -11001 or	14	3	-40 °C ≤ Ta ≤ +75 °C
3773 -11101	те	2	-40 °C ≤ Ta ≤ +65 °C
	10	3	-40 °C ≤ Ta ≤ +40 °C
	ТА	2	-40 °C ≤ Ta ≤ +80 °C
3773 -11002 or	14	3	-40 °C ≤ T <sub>a</sub> ≤ +80 °C
3773 -11102	Те	2	-40 °C ≤ Ta ≤ +66 °C
	10	3	-40 °C ≤ Ta ≤ +45 °C
	TA	2	-40 °C ≤ Ta ≤ +80 °C
3773 -11003 or	14	3	-40 °C ≤ T <sub>a</sub> ≤ +80 °C
3773 -11103	Те	2	-40 °C ≤ T <sub>a</sub> ≤ +66 °C
	10	3	-40 °C ≤ Ta ≤ +45 °C
	TA	2	-40 °C ≤ Ta ≤ +80 °C
3773 -11004 or	14	3	-40 °C ≤ Ta ≤ +80 °C
3773 -11104	те	2	-40 °C ≤ Ta ≤ +66 °C
	10	3	-40 °C ≤ Ta ≤ +45 °C
	TA	2	-40 °C ≤ Ta ≤ +80 °C
3773 -11005 or	14	3	-40 °C ≤ Ta ≤ +80 °C
3773 -11105	те	2	-40 °C ≤ Ta ≤ +66 °C
	10	3	-40 °C ≤ Ta ≤ +45 °C
	TA	2	-40 °C ≤ Ta ≤ +80 °C
3773 -11006 or	14	3	-40 °C ≤ Ta ≤ +80 °C
3773 -11106	те	2	-40 °C ≤ Ta ≤ +66 °C
· · · · · · · · · · · · · · · · · · ·	10	3	-40 °C ≤ Ta ≤ +45 °C
3773 -11007 or	T4	-	-25 °C ≤ Ta ≤ +70 °C
3773 -11107	T6	-	-25 °C ≤ T₀ ≤ +70 °C

TÜV Rheinland Industrie Service GmbH Am Grauen Stein 51105 Cologne Tel. +49 (0) 221 806-0 Fax. + 49 (0) 221 806 114

Page 3/4



Attachment to Certificate IECEX TUR 19.0010X Revison 0



Micro Switches operation with type of protection Intrinsic Safety Ex ia IIC (The temperature rise of the micro Switches is negligible.):

Model Code	Permissible ambient temperature Ta
3773 -11020 or 3773 -11120	-40 °C ≤ Ta ≤ +80 °C
3773 -11021 or 3773 -11121	-40 °C ≤ Ta ≤ +80 °C
3773 -11024 or 3773 -11124	-40 °C ≤ T <sub>a</sub> ≤ +80 °C
3773 -11025 or 3773 -11125	-40 °C ≤ T <sub>a</sub> ≤ +80 °C
3773 -11026 or 3773 -11126	-40 °C ≤ T <sub>a</sub> ≤ +80 °C
3773 -11027 or 3773 -11127	-20 °C ≤ T <sub>a</sub> ≤ +80 °C

Dust atmosphere:

Inductive switches operation with type of protection Intrinsic Safety Ex ia IIIB:

	Maximum	Maximum Permissible ambient temperature			
Model code	surface temperature	Type 2	Type 3		
3773 -11001 or 3773 -11101		-40 °C ≤ T <sub>a</sub> ≤ +60 °C	-40 °C ≤ T <sub>a</sub> ≤ +35 °C		
3773 -11002 or 3773 -11102		-40 °C ≤ T <sub>a</sub> ≤ +60 °C	-40 °C ≤ T <sub>a</sub> ≤ +49 °C		
3773 -11003 or 3773 -11103	T 95 °C	-40 °C ≤ T <sub>a</sub> ≤ +60 °C	-40 °C ≤ T <sub>a</sub> ≤ +49 °C		
3773 -11004 or 3773 -11104		-40 °C ≤ T <sub>a</sub> ≤ +60 °C	-40 °C ≤ T <sub>a</sub> ≤ +49 °C		
3773 -11005 or 3773 -11105		-40 °C ≤ T <sub>a</sub> ≤ +60 °C	-40 °C ≤ T <sub>a</sub> ≤ +49 °C		
3773 -11006 or 3773 -11106		-40 °C ≤ T <sub>a</sub> ≤ +60 °C	-40 °C ≤ T <sub>a</sub> ≤ +49 °C		
3773 -11007 or 3773 -11107		-25 °C ≤ T	r <sub>a</sub> ≤ +70 °C		

Micro Switches operation with type of protection Intrinsic Safety Ex ia IIIB (The temperature rise of the micro Switches is negligible.):

The max. surface temperature is equal to the max. ambient temperature.

TÜV Rheinland Industrie Service GmbH Am Grauen Stein 51105 Cologne Tel. +49 (0) 221 806-0 Fax. + 49 (0) 221 806 114

Page 4 / 4



### 1 Safety instructions for ATEX and IECEx

The following safety instructions and safety-related notes must be included in the operating and mounting instructions as required according to Clause 30 of IEC/EN 60079-0 and the Directive 2014/34/EU.

The device must be mounted, started up and serviced by fully trained and qualified personnel only who are familiar with the product; the accepted industry codes and practices are to be observed. According to these mounting and operating instructions, trained personnel refers to individuals who are able to judge the work they are assigned to and recognize possible hazards due to their specialized training, their knowledge and experience as well as their knowledge of the applicable standards.

Explosion-protected versions of this device must be operated only by personnel who has undergone special training or instructions or who is authorized to work on explosion-protected devices in hazardous areas.

To avoid personal injury or property damage, plant operators and operating personnel must prevent hazards that could be caused in the control valve by the process medium, the operating pressure, the signal pressure or by moving parts by taking appropriate precautions. If inadmissible motions or forces are produced in the pneumatic actuator as a result of the supply pressure, it must be restricted using a suitable supply pressure reducing station.

Proper shipping and storage are assumed.

#### 1.1 Electrical connections

### A DANGER

Risk of fatal injury due to the formation of an explosive atmosphere.

For mounting and electrical installation in hazardous areas, observe the explosion protection approvals as well as the relevant electrotechnical regulations and the accident prevention regulations that apply in the country of use.

EN 60079-14 applies in Europe: Electrical installations design, selection and erection

### 

Incorrect electrical connection will render the explosion protection unsafe. Adhere to the terminal assignment and observe correct polarity.

Do not undo the enameled screws.

Do not exceed the maximum permissible values ( $U_{i\prime}$ ,  $I_i$ ,  $P_{i\prime}$ ,  $C_{i\prime}$ ,  $L_i$ ) specified in the EC type examination certificates when interconnecting intrinsically safe electrical equipment.

EX 3773

Version 2019-03-21

1 of 5



### Selecting cables and wires

Observe the relevant clauses of EN 60079-14 for installation of intrinsically safe circuits. Seal cable entries left unused with plugs.

#### 1.2 Servicing explosion-protected devices

If a part of the device on which the explosion protection is based needs to be serviced, the device must not be put back into operation until a qualified inspector has assessed it according to explosion protection requirements, has issued an inspection certificate, or given the device a mark of conformity.

Inspection by a qualified inspector is not required if the manufacturer performs a routine test on the device before putting it back into operation. Document the passing of the routine test by attaching a mark of conformity to the device.

Replace explosion-protected components only with original, routine-tested components by the manufacturer.

Devices that have already been operated outside hazardous areas and are intended for future use inside hazardous areas must comply with the safety requirements placed on serviced devices. Before being operated inside hazardous areas, test the devices according to the specifications for servicing explosion-protected devices.

#### 1.3 Maintenance, calibration and work on equipment

Interconnection with intrinsically safe circuits to check or calibrate the equipment inside or outside hazardous areas is to be performed only with intrinsically safe current/voltage calibrators and measuring instruments to rule out any damage to components relevant to explosion protection.

Observe the maximum permissible values specified in the certificates for intrinsically safe circuits.

### A DANGER

Risk of fatal injury as a result of electrostatic discharge at the housing.

The device's housing is made of polycarbonate and may become electrostatically charged when handled improperly. An electric spark generated by electrostatic discharge may lead to ignition of a potentially explosive atmosphere and cause death.

Clean the device in dust atmospheres regularly. Only use a damp cloth or wipes to clean the housing surface.

EX 3773

Version 2019-03-21

2 of 5



### 2 Explosion protection data

ATEX: II 2 G Ex ia IIC T6 Gb/II 2 D Ex ia IIIB T 95 °C IECEx: Ex ia IIC T6 Gb/Ex ia IIIB T 95 °C Db

### 2.1 Signal current circuit

Inductive limit contacts

Terminals +41/-42 and +51/-52						
Type of protection: E	x ia IIC/IIIB					
Type designation	Ui	Туре	l <sub>i</sub>	Pi	C <sub>i</sub>	L,
3773-11001 or	16.1/	2	25 mA	64 mW	1 <i>5</i> 0 nF	1 <i>5</i> 0 µH
3773-11101	10 V	3	52 mA	169 mW	1 <i>5</i> 0 nF	1 <i>5</i> 0 µH
3773-11002 or	17.17	2	25 mA	64 mW	1 <i>5</i> 0 nF	150 µH
3773-11102	10 V	3	52 mA	169 mW	1 <i>5</i> 0 nF	1 <i>5</i> 0 µH
3773-11003 or	1717	2	25 mA	64 mW	1 <i>5</i> 0 nF	1 <i>5</i> 0 µH
3773-11103	10 V	3	52 mA	169 mW	1 <i>5</i> 0 nF	1 <i>5</i> 0 µH
3773-11004 or	16.1/	2	25 mA	64 mW	50 nF	250 µH
3//3-11104	10 V	3	52 mA	169 mW	50 nF	250 µH
3773-11005 or	17.17	2	25 mA	64 mW	30 nF	100 µH
3773-11105	10 V	3	52 mA	169 mW	30 nF	100 µH
3773-11006 or	141/	2	25 mA	64 mW	30 nF	100 µH
3773-11106	10 V	3	52 mA	169 mW	30 nF	100 µH
3773-11007 or 3773-11107	20 V	_	60 mA	130 mW	250 nF	350 µH

Electric microswitches

Terminals 41, 42, 43 and 51, 52, 53							
Type of protection: Ex ia IIC/IIIB							
Ui	l <sub>i</sub>	Pi	C <sub>i</sub>	L,			
28 V	115 mA	500 mW	0 nF	0 µH			

EX 3773

Version 2019-03-21



### 2.2 Temperatures

### 2.2.1 Intrinsic safety Ex ia IIC

Inductive limit contacts in type of protection intrinsic safety Ex ia IIC

Type designation	Temperature class	Туре	Permissible ambient temperature Ta
	T4	2	-40 °C ≤ Tα ≤ +80 °C
2772-11001 or 2772-11101	14	3	-40 °C ≤ Tα ≤ +75 °C
3773-11001 01 3773-11101	та	2	-40 °C ≤ Tα ≤ +65 °C
	10	3	$-40 \text{ °C} \le Ta \le +40 \text{ °C}$
	ти	2	-40 °C ≤ Tα ≤ +80 °C
$2772 \cdot 11002 \text{ or } 2772 \cdot 11102$	14	3	-40 °C ≤ Ta ≤ +80 °C
3773-11002 of 3773-11102	T4	2	$-40 \text{ °C} \le Ta \le +66 \text{ °C}$
	10	3	$-40 \text{ °C} \le Ta \le +45 \text{ °C}$
	ти	2	-40 °C ≤ Tα ≤ +80 °C
$2772 \cdot 11002 \text{ or } 2772 \cdot 11102$	14	3	-40 °C ≤ Tα ≤ +80 °C
3773-11003 01 3773-11103	τ/	2	-40 °C ≤ Ta ≤ +66 °C
	10	3	$-40 \text{ °C} \le Ta \le +45 \text{ °C}$
	тл	2	-40 °C ≤ Tα ≤ +80 °C
2772-11004 or 2772-11104	14	3	-40 °C ≤ Tα ≤ +80 °C
3773-11004 or 3773-11104	Τ/	2	–40 °C ≤ Ta ≤ +66 °C
	10	3	$-40 \text{ °C} \le Ta \le +45 \text{ °C}$
	ти	2	-40 °C ≤ Tα ≤ +80 °C
2772 11005 - 2772 11105	14	3	-40 °C ≤ Tα ≤ +80 °C
3773-11005 or 3773-11105	T4	2	–40 °C ≤ Ta ≤ +66 °C
	10	3	-40 °C ≤ Ta ≤ +45 °C
	ти	2	-40 °C ≤ Ta ≤ +80 °C
2772 11004 - 2772 11104	14	3	-40 °C ≤ Ta ≤ +80 °C
3//3-11006 or 3//3-11106	Τ/	2	–40 °C ≤ Ta ≤ +66 °C
	10	3	-40 °C ≤ Ta ≤ +45 °C
2772 11007 -= 2772 11107	T4	-	–25 °C ≤ Ta ≤ +70 °C
3773-11007 or 3773-11107	T6	-	–25 °C ≤ Ta ≤ +70 °C

EX 3773

Version 2019-03-21

4 of 5



Type designation	Permissible ambient temperature Ta
3773-11020 or 3773-11120	-40 °C ≤ Tα ≤ +80 °C
3773-11021 or 3773-11121	-40 °C ≤ Tα ≤ +80 °C
3773-11024 or 3773-11124	-40 °C ≤ Tα ≤ +80 °C
3773-11025 or 3773-11125	-40 °C ≤ Tα ≤ +80 °C
3773-11026 or 3773-11126	-40 °C ≤ Tα ≤ +80 °C
3773-11027 or 3773-11127	–20 °C ≤ Ta ≤ +80 °C

Electric microswitches in type of protection intrinsic safety Ex ia IIC

#### 2.2.2 Intrinsic safety Ex ia IIIB

Use with flammable dusts in hazardous areas:

Type designation	Maximum sur- face tempera- ture	Max. perm. ambient temperature	
		Type 2	Туре 3
3773-11001 or 3773-11101	T 95 °C	-40 °C ≤ Ta ≤ +60 °C	–40 °C ≤ Ta ≤ +35 °C
3773-11002 or 3773-11102	T 95 °C	$-40 \degree C \le Ta \le +60 \degree C$	-40 °C ≤ Ta ≤ +49 °C
3773-11003 or 3773-11103	T 95 °C	-40 °C ≤ Ta ≤ +60 °C	-40 °C ≤ Ta ≤ +49 °C
3773-11004 or 3773-11104	T 95 °C	-40 °C ≤ Ta ≤ +60 °C	-40 °C ≤ Ta ≤ +49 °C
3773-11005 or 3773-11105	T 95 °C	$-40 \degree C \le Ta \le +60 \degree C$	-40 °C ≤ Ta ≤ $+49$ °C
3773-11006 or 3773-11106	T 95 °C	-40 °C ≤ Ta ≤ +60 °C	-40 °C ≤ Ta ≤ +49 °C
3773-11007 or 3773-11107	T 95 °C	–25 °C ≤ Ta ≤ +70 °C	

The dust protection of the microswitches is ensured through intrinsic safety of Group IIC according to Clause 5.5 of EN 60079-11/IEC 60079-11. The temperature rise of the microswitches is negligible.

i Note

The associated certificates can be found on our website (www.samson.de > Products & Applications > Product selector).

EX 3773

Version 2019-03-21

5 of 5

# 15 Annex

# 15.1 After-sales service

Contact our after-sales service for support concerning service or repair work or when malfunctions or defects arise.

You can reach our after-sales service at aftersalesservice@samsongroup.com.

### Addresses of SAMSON AG and its subsidiaries

The addresses of SAMSON AG, its subsidiaries, representatives and service facilities worldwide can be found on our website (www.samsongroup.com) or in all SAMSON product catalogs.

### **Required specifications**

Please submit the following details:

- Order number and position number in the order
- Type, serial number, firmware version, device version

# EB 3773 EN



SAMSON AKTIENGESELLSCHAFT Weismüllerstraße 3 · 60314 Frankfurt am Main, Germany Phone: +49 69 4009-0 · Fax: +49 69 4009-1507 samson@samsongroup.com · www.samsongroup.com